

Bell Cover Size Chart

Dot Color*	Model	Min Bell Size (in)	MAX Bell Size (in)	Instrument Examples
NO DOT	A	N/A	N/A	Flute (2in round circles)
WHITE	B	2.5"	3.75"	Clarinet, Oboe, Bassoon
RED	C	4.5"	5.5"	Alto Sax, Bass Clarinet, Trumpet
ORANGE	D	5.75"	6.75"	Tenor Sax, Flugel Horn
YELLOW	E	7"	9"	Baritone Sax, Trombone
GREEN	F	9.5"	11"	Mellophone, Bass Trombone, Baritone
GREY	G	11.5"	13"	French Horn, Euphonium
BROWN	H	13.5"	16"	Concert Tubas 14.5" & 15.5"
PURPLE	I	16.5"	18"	Concert Tubas 17.5" & 19.5"
PINK	J	19"	21"	Concert & Marching Tubas 19 5/8" & 21"
LIGHT BLUE	L	24.5"	26"	Sousaphones
*for printed covers only				

Printed Safety Bell Covers (logo/graphics added) have a color-coded dot near bottom of elastic stitch to help keep sizes organized after delivery. Non-printed (solid black/white) will not have this reference. We suggest using a permanent type marking pen to label non-printed covers near elastic after delivery to help keep these organized.

Concert French Horn Bell Cover slits for R hand placement can be cut onsite after delivery by using an exacto knife or razor blade. Fabric is poly-spandex and will not unravel.

If you ordered Cover A (2" end cap for Flutes/Piccolo's), you will need to use small rubber bands or black hair bands for attaching fabric to instrument.

Since this is a new product, we'd appreciate feedback to help make our products better.

Call or email with any questions.

Alan Mueggenborg, Director-Marching Arts Division
918-806-2499 (direct)
FLASH@bstem.us